



2011 Ford F-150 SVT Raptor

4.2-inch Productivity Screen

An available 4.2-inch LCD (liquid crystal display) productivity screen gives information related to off-roading and towing and includes a unique F-150 SVT Raptor welcome animation. The menu is navigated through a five-way button on the steering wheel and is located between the speedometer and tachometer.

LCD PRODUCTIVITY SCREEN

Visual data, text data and displays are presented in an engaging, easy-to-use manner. Each of the six base menu options can be customized by the user.

Gauge mode: Check temperature


Actual temperature of the transmission

Trip computer: Counting the miles

- Information on two trips available
- Trip time and mileage
- Gallons of fuel used and mpg

Fuel economy: Up-to-the-second information

- Configurable fuel history can be broken down to three time periods
- Five resets available to track fuel history
- Fuel economy displays miles to empty, as well as average and instantaneous mpg

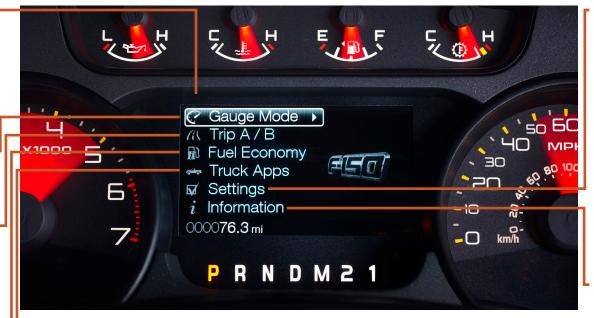

Truck applications: Engaging off-road mode; towing functionality and checklists

- Specific to F-150 SVT Raptor, this screen allows customers to access information about various features such as AdvanceTrac® with RSC® (Roll Stability Control™), Hill Descent Control™, off-road mode, electronic locking differential and the 4x4 system to help them make informed decisions on what technologies might be of use in a given situation
- Off-road screen allows customers to see the side slope and grade angle of the vehicle during offroad maneuvers
- · Trailer tow customers can:
- Name and change a trailer, in order to track mileage and store gain settings via the trailer brake controller on the instrument panel
- Delete trailers
- Access information on specific features such as trailer brake controller and tow/haul mode
- Choose a type of trailer connected and go through a connection checklist

Settings

- · Turn features on or off
- · Change duration of lamps
- Change operating condition for maintenance schedules
- Set oil life percentage
- Set the rear view camera settings including visual park aid, guidelines and camera delay
- · Change modes for trailer brake
- Set all MyKey® settings (if equipped)
- Change language and units
- Set wiper functions
- Set all Remote Start functions (if equipped)

Information: Navigate and view warnings

- The system check screen displays information such as oil life, engine hours, engine idle hours and open doors
- Warnings, such as "left rear door ajar," can be displayed graphically
- All-new messages and warnings include trailer sway control, Hill Descent Control and Tire Pressure Monitoring System
- Show how many keys are programmed for MyKey (if equipped)